

8330-8331

Circus

DESIGN: ALEKSANDER BORGENHOV

Circus is eminently suitable for demanding work in beauty parlours, clinics and laboratories or as a tool for people with impaired vision. Circus has a large lens and patented highly flexible self-balancing arm and shade neck. The shade-neck can be positioned horizontally, vertically and laterally making the luminaire extremely flexible.



TECHNICAL INFORMATION 8330-8331 Circus


Circus is the most advanced illuminated magnifier ever designed. It utilizes the latest lamp technology using a high-intensity 22W circular T5 tube with very good colour rendering capacity. The tube is operated by high-frequency ballast eliminating flickering and prolonging lamp-life. Circus has a very large "free floating" lens of $\varnothing 165\text{mm}$ giving a large field of view with a very narrow frame around it. The large lens permits comfortable viewing with both eyes. A circular light-source is the ideal way of illuminating an object, virtually eliminating shadows. Carefully calculated reflector optics gives a very high light-intensity at focal distance. The fully covered spring-balanced arm makes it easy to position the luminaire in the correct position and makes cleaning easy. A hinged lens cover is standard. It protects the lens from dust and prevents the luminaire from inadvertently tumbling into a burning glass. 2 different swing-away attachment lenses of 4 and 6 dioptre are available. They swing out from the lens cover when needed. The clean design fits any interior.

Colours:



8330-8331 Circus

LUXO ASA, Drammensveien 175, N-0277 Oslo, Norway

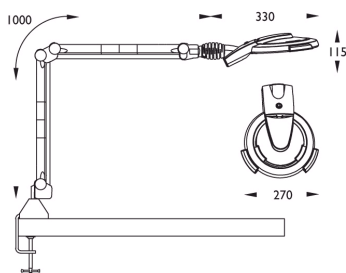

OPTIONS

CIRCUS 3.5D

Article no.	Light source	Lamp socket	Ilcos	Power	Total effect	Weight	Voltage	Arm length	Lumen	lm/w	IP	Colour rendering	Colours
8330-122-1	T5-C	2Gx13	FSCH	1x22	22W	4 kg	230/240V	1000 mm	1800	81	20	85	<input type="checkbox"/> <input type="checkbox"/>
8330-122-2	T5-C	2Gx13	FSCH	1x22	22W	4 kg	230/240V	1000 mm	1800	81	20	85	<input type="checkbox"/> <input type="checkbox"/>

CIRCUS 5D

Article no.	Light source	Lamp socket	Ilcos	Power	Total effect	Weight	Voltage	Arm length	Lumen	lm/w	IP	Colour rendering	Colours
8331-122-1	T5-C	2Gx13	FSCH	1x22	22W	4 kg	230/240V	1000 mm	1800	81	20	85	<input type="checkbox"/> <input type="checkbox"/>
8331-122-2	T5-C	2Gx13	FSCH	1x22	22W	4 kg	230/240V	1000 mm	1800	81	20	85	<input type="checkbox"/> <input type="checkbox"/>

ACCESSORIES

Accessory	Article number
Attachment lens CIRCUS 4D	8970-001
Attachment lens CIRCUS 6D	8970-002

RELATED PRODUCTS



AH-table clamp
8990
Task light accessories



CC surface mounted bracket
8990
Task light accessories



TE table bushing
8990
Task light accessories



Trolley
8990
Task light accessories